 


LED 720P SMART PROJECTOR

User Manual

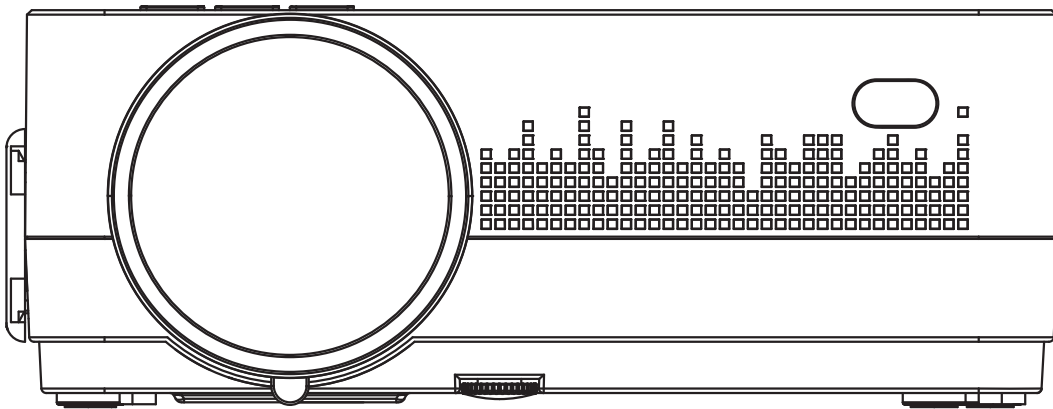


CONTENTS

PACKING LIST	01
PRECAUTIONS	02
INSTALLATION AND PROJECTION MODE	04
PORT AND BUTTON	05
TURN ON/OFF	06
FOCUS	06
BLUETOOTH REMOTE CONTROL	07
HOME PAGE	08
TO MANAGE THE APPS	09
MIRACAST, AIRPLAY, DLNA FUNCTION	10
KEYSTONE	12
SELECT SOURCE	14
TECHNICAL SPECIFICATION	15
PROJECTION DISTANCE AND SIZE	15


PACKING LIST

- 1 x Projector
- 1 x Remote Control
- 1 x Power cable
- 1 x User Manual
- 1 x HDMI Cable
- 1 x A/V Cable


Open the package and you will find the following items in the package:

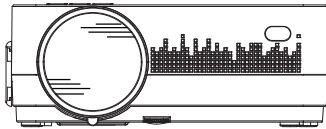

Projector

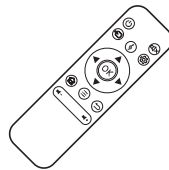


Remote Control

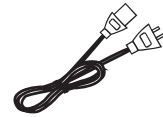


Power Cable



User Manual

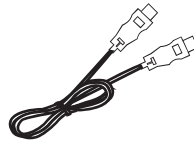

HDMI Cable

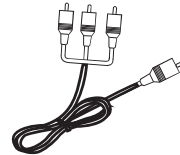

Audio/Video Cable

The accessories are applicable to your area and may differ from the illustrations. Please refer to the actual packaging.

PRECAUTIONS

(1) Important safety precautions:

The following safety instructions ensure that the unit maintains a long service life and prevents fire or electric shock.

- Please read them carefully and be aware of all the warnings below.
- Do not install in a place with poor ventilation.
- Do not install in hot and humid places.
- Do not block the ventilation holes (intake or exhaust).
- Do not install in dusty places..
- Do not install near high temperature or smoke sensors, as this may cause malfunction of sensors.
- Do not install in a place where the air conditioning is directly blown by the cold air, otherwise it may be condensed by water vapor.

Or the temperature rises and the body malfunctions.

(2) Installation:

- For the best effect, use the unit in a dark room.
- Use the unit with care. Dropping or bumping may damage the components inside the unit.

(3) Power supply:

- Use the power cord carefully to avoid excessive bending and damage to the power cord otherwise it will result in electric shock or fire.
- After using the unit, unplug the power cord from the power outlet.

(4) Cleaning:

- Unplug the power cord from the unit and periodically clean the cabinet with a damp cloth. If it is dusty, use a neutral detergent. Never use strong detergents or solvents such as alcohol or thinner.

-
-
- The lens should be cleaned with an air brush or lens paper, and take the lens with care not to scratch it.
 - Clean the vents and speakers on the unit regularly with a vacuum cleaner. If the vents are clogged with dust, the machine may be overheated and cause a malfunction. When using the vacuum cleaner, use a soft brush.
 - Do not use hard accessories such as metal tools to clean the gap.

(5) Notes on fire and electric shock:

- Make sure that the air vents are not blocked so that it can prevent hot air from accumulating in the unit and prevent objects such as paper clips or paper dust from falling into the unit. Do not attempt to retrieve objects falling into the unit. Never insert any metal objects, such as wire or screwdriver into the unit. In the unlikely event that any item falls into the projector, please turn off the projector and consult with seller.
- Do not place any liquid on top of the unit.

(6) Moving the projector:

- When moving the projector, please use soft packaging material to cover it. Do not vibrate the projector violently.

(7) High temperature attention:

- Before projection and after projection, the vicinity of the exhaust port will become hot. Do not touch it with your hands to avoid burns.

(8) Installed in a location away from the wall:

- To maintain the performance and reliability of the projector, leave at least 30 CM between the projector and the wall.


INSTALLATION AND PROJECTION MODE

Projection Mode


This projector can be installed in four ways :

Front on desk ,Front on ceiling, Rear on desk and Rear on ceiling.

Settings -> System -> Projector Mode

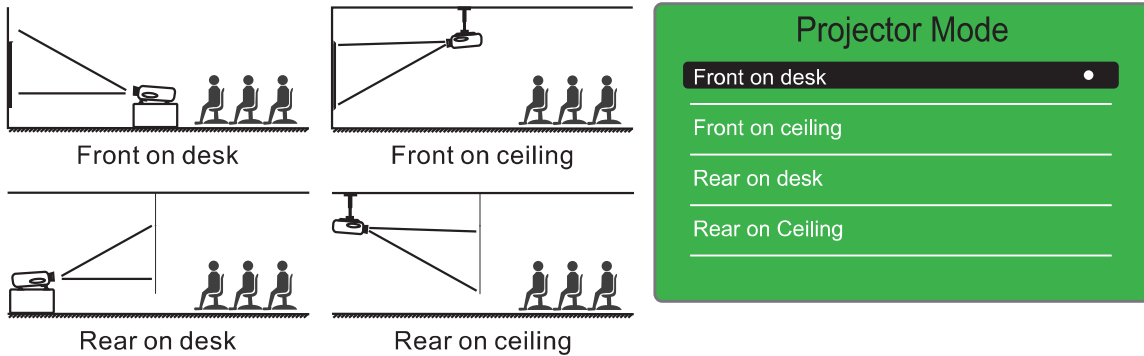

Ceiling Mount Installation



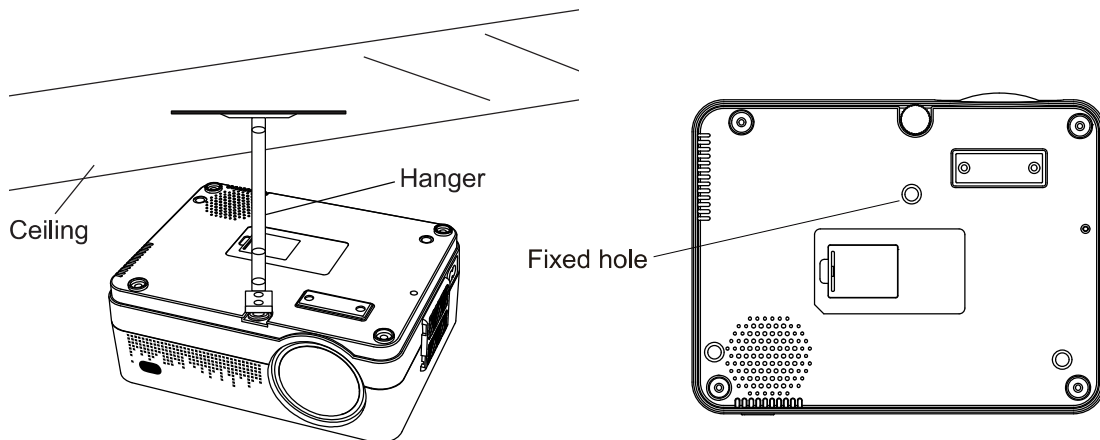


warning:



Do not place the projector near a heat source to prevent the projector from overheating.

When installing the projector, be sure to use screws of the appropriate quality and the depth of the screws should be deep enough to prevent the projector from falling.

PORT AND BUTTON

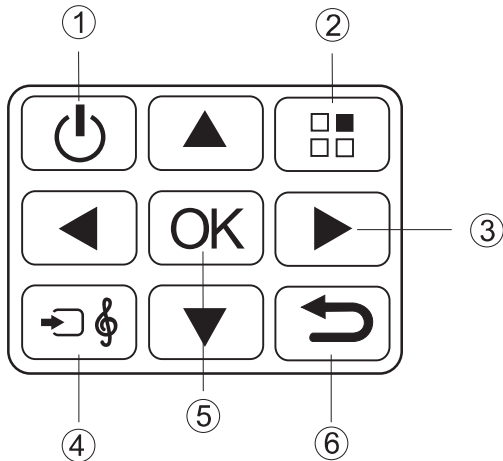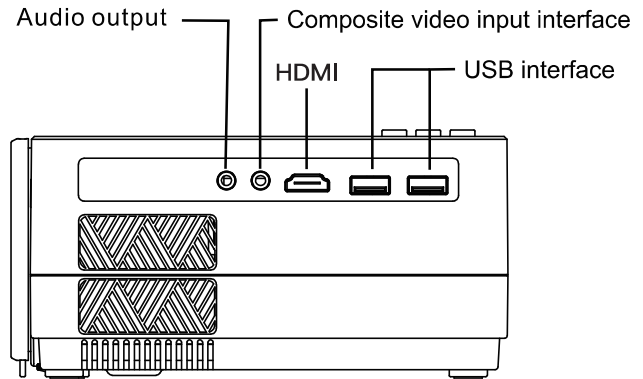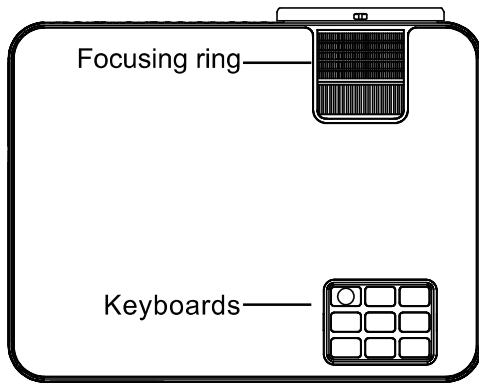


- 1.Power
- 2.Menu
- 3.Arrow Buttons
- 4.Source
- 5.OK Button
- 6.Return/Back

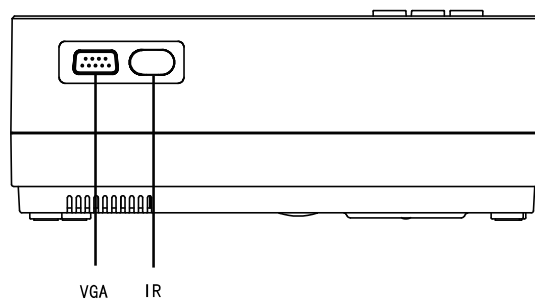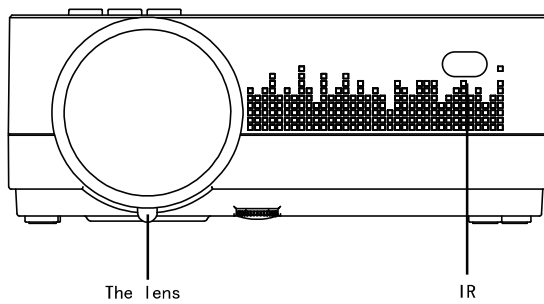

TURN ON/OFF


Press the projector's power button or the remote's (⏻), the machine will run normally after about 8 seconds.

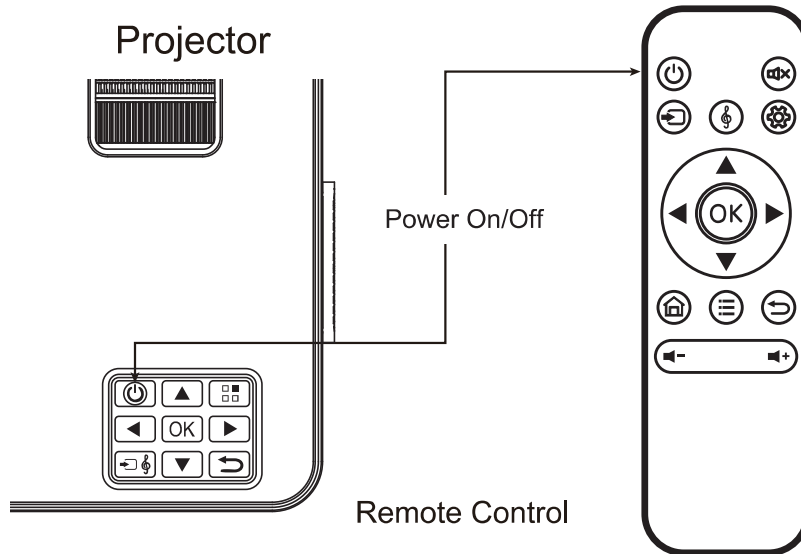


FOCUS

Focus: When the picture is blurred or unclear (Figure 1), please rotate the "Focus Ring" to adjust the lens to achieve clear picture (Figure 2).


If you are unable to achieve satisfactory clarity by adjustment, please move the projector back and forward appropriately until the picture is clear as shown in Figure 2.

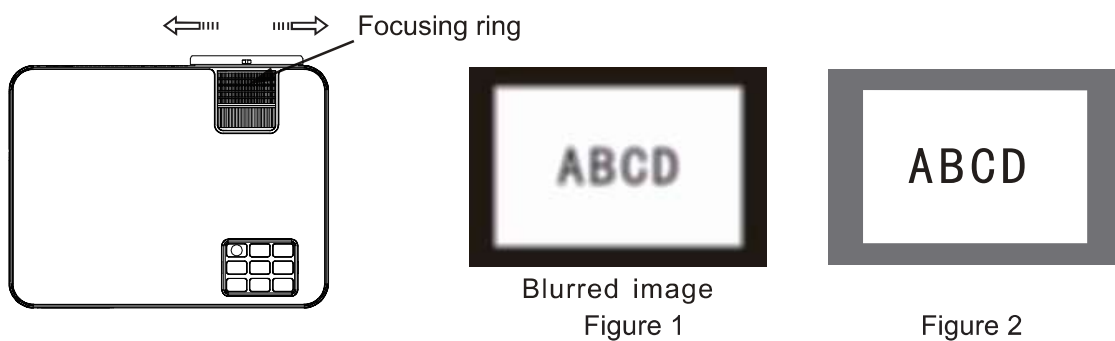

BLUETOOTH REMOTE CONTROL

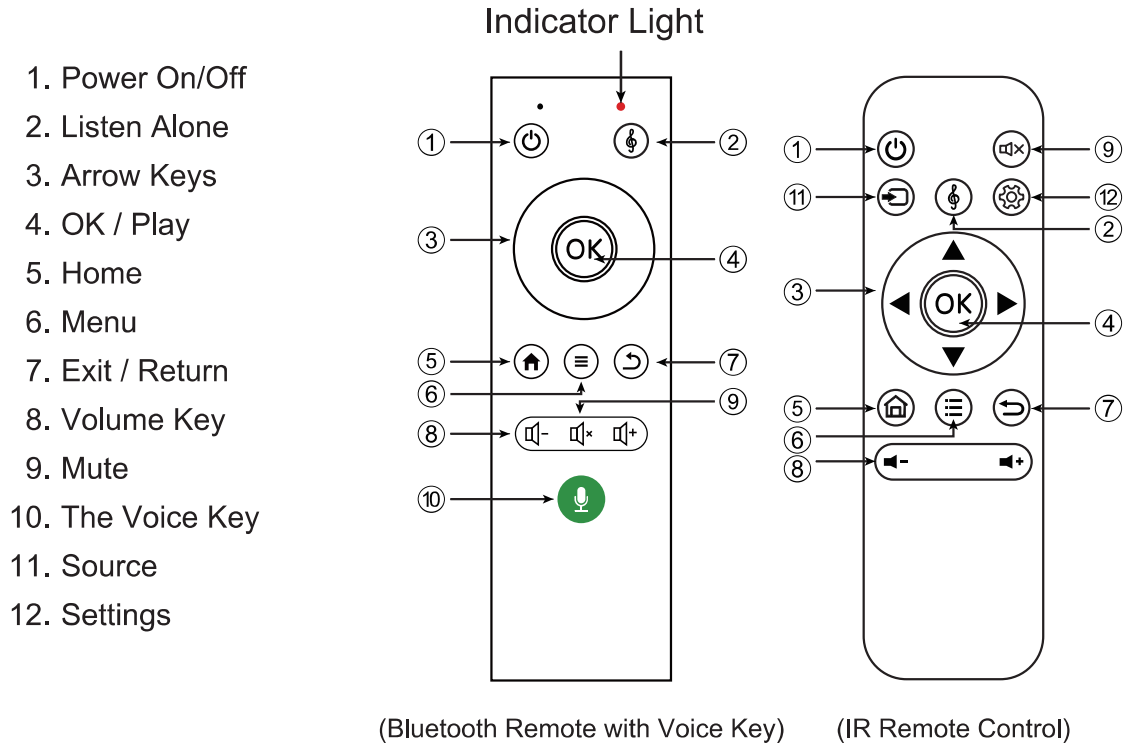


 To Pair the Bluetooth Remote Control (1)

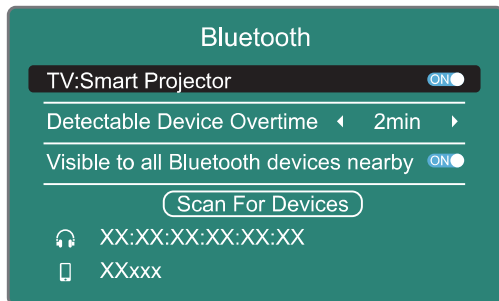


1. Press the “left” and “right” keys;
2. Light flickered, matching mode is being activated;
3. Turn on the projector’s Bluetooth as shown on the left
 Settings → Bluetooth
4. Select “ EasyVoice” And connect.

 To Pair the Bluetooth Remote Control (2)

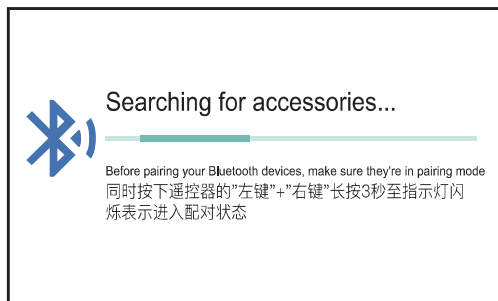

1. Press the Voice key on the Home Page, and the left picture will appear;
2. Press the “left” and “right” keys, Light flickered, matching mode is being activated;
3. The system will pair the Bluetooth remote control automatically.

HOME PAGE

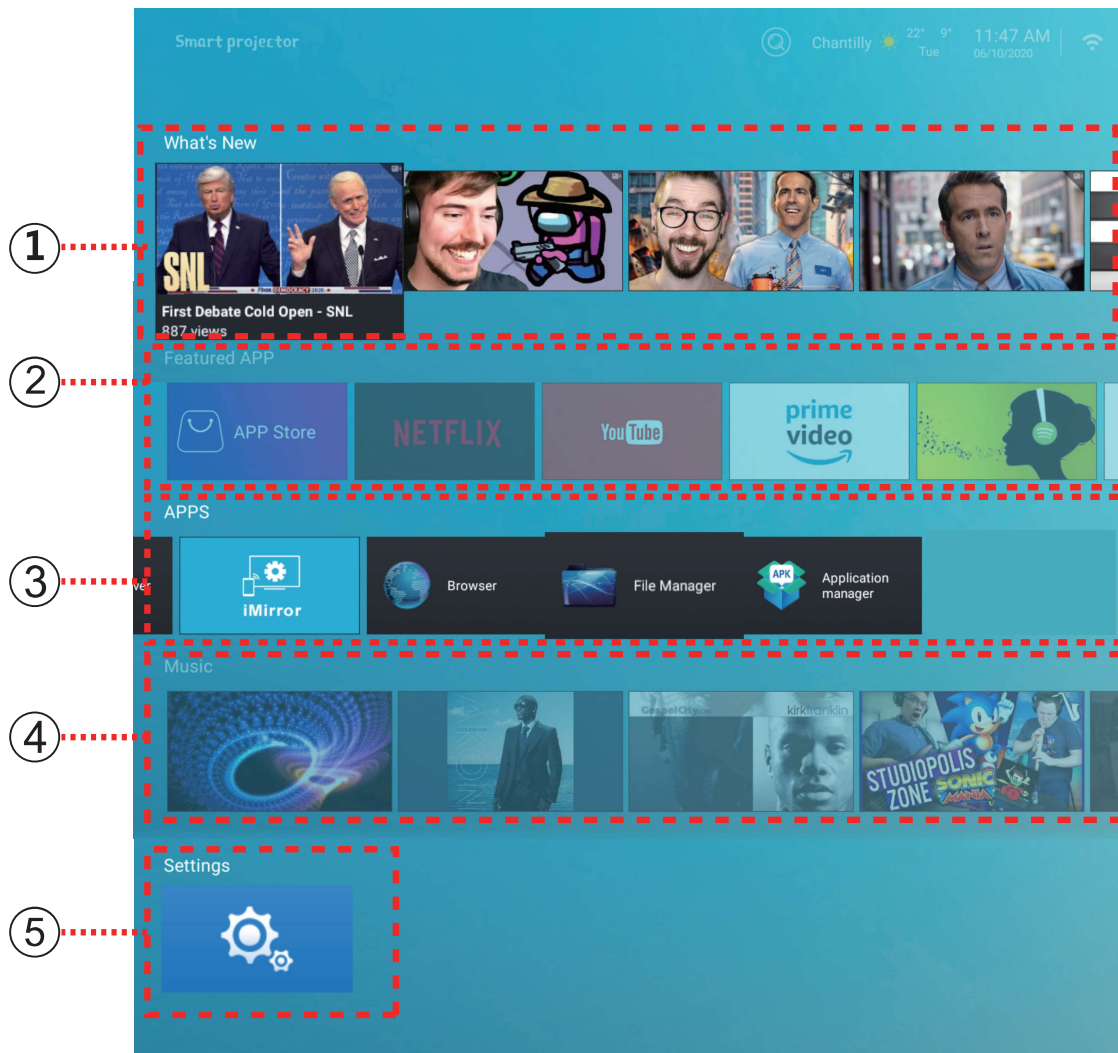


1. Popular video push area: you can watch news, movies, music, and other popular videos.
2. Featured APP area: you can use popular apps and app store
3. Local application area: you can check installed apps and File Manager
4. Other category push area: movies, music, sports, etc.
5. Settings: Network , Bluetooth , Projector Mode , Keystone Correction , Digital Zoom , Aspect Ratio , etc.

TO MANAGE THE APPS

1.To download apps from APP store for TV;

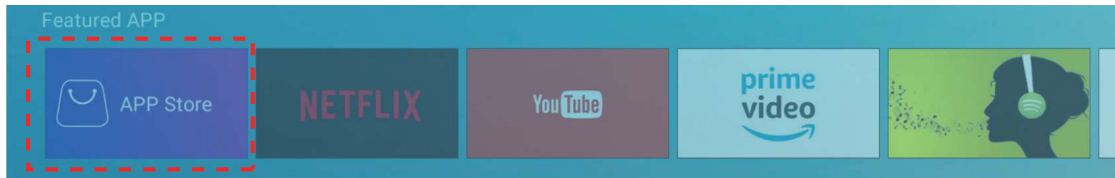

Click APP Store < >on the home page;

 


2.Install new apps by USB


Operation Steps:

1.Copy the APP under the root directory of U disk;

2.Click Apps File Manager < > ,Select U disk< >,Find the APK and to install it from U disk.

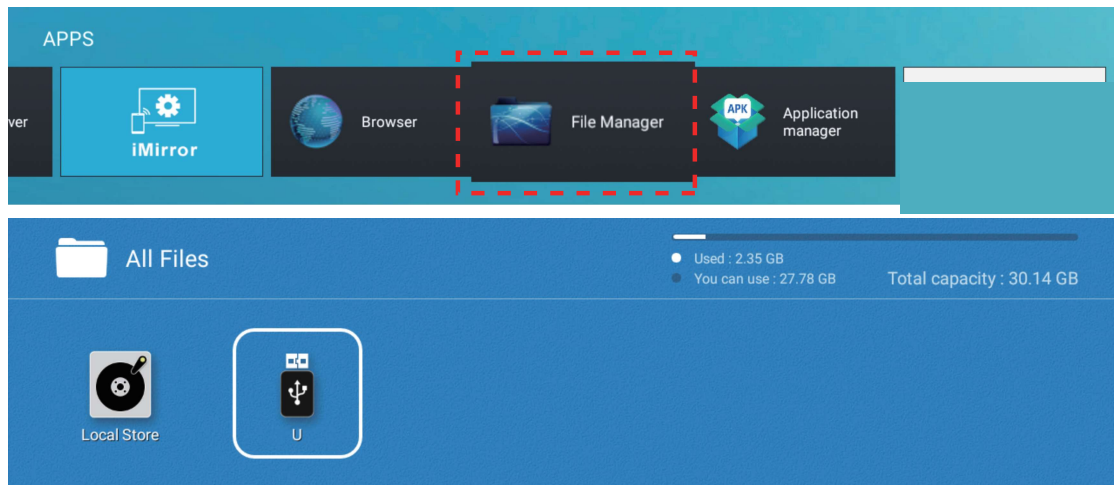

3.Uninstall the app



Select APP in the APPS area, and then click the menu < > button on the remote control , choose delete to uninstall app.

MIRACAST, AIRPLAY, DLNA FUNCTION

The Eshare App is pre-installed in the projector for a better experience with Android Phone, iOS Apple phone, Pad.

1.To set the phone or pad in the same network as projector.



-  1.Connect your device to"NETWORK-01"
2.Visit "http://10.0.0.11" with web browser or scan the QR-code to download app.  **Setting**
3.Launch EShare and click "EShare-*****" to connect.

2.To Download the Eshare App by scanning the QR code on the projection screen.

3.When being open, the Eshare on the Android devices will search the projector automatically. To choose the same name shown on the projection screen, and to connect it.


4. iOS devices also need to download Eshare App by scanning the QR code, or download from website.

Note: Eshare App has more functions, such as Mirroring, TV mirroring, and remote control. Please go to Eshare App for more instructions.



Connect to Large Display

Please ensure that your iOS device and projector are in the same WiFi , open EShare on the phone, it will automatically search projector in the same WiFi. and then click the device name you want to connect. Or you can click “Scan QR” to scan the QR-Code to connect to the projector.

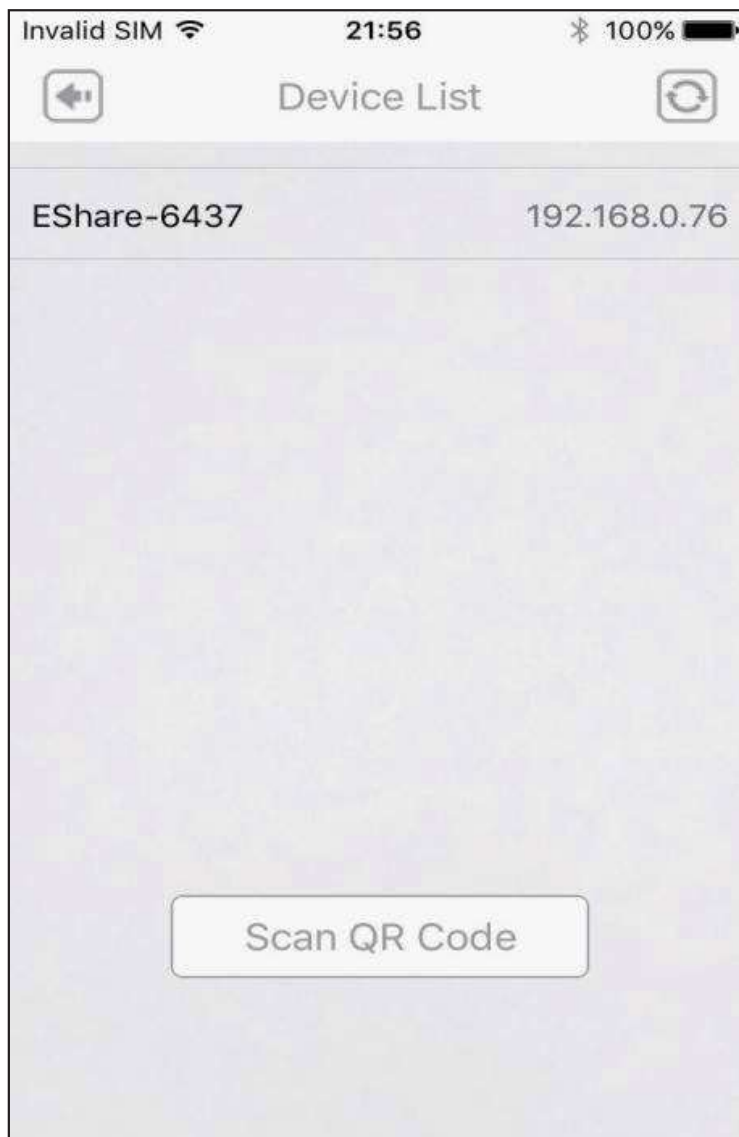

KEYSTONE CORRECTION (4D DIGITAL)

More than horizontal and vertical keystone correction, this projector supports four points trapezoidal adjustment.

Keystone correction

Setting Path: Settings→System→Keystone Correction→Manual Correction


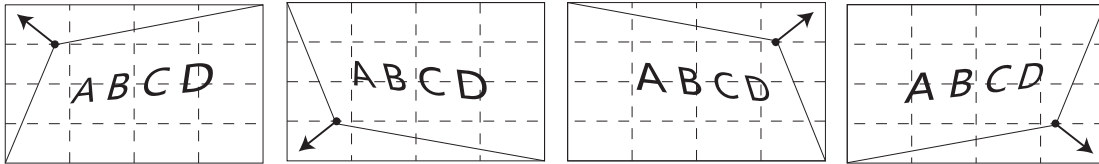



Figure 1

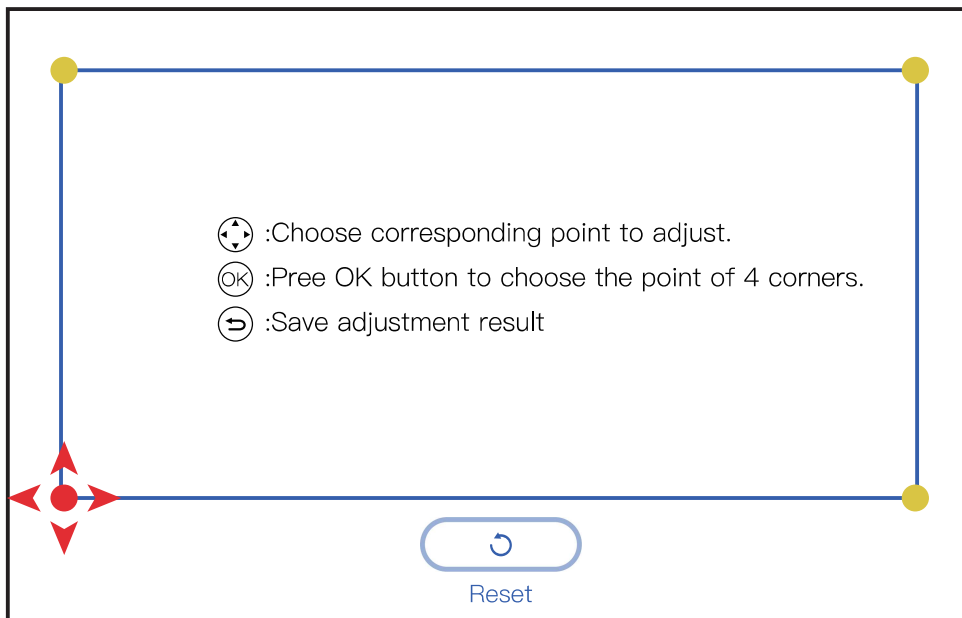

 :Choose corresponding point to adjust.

 :Press OK button to choose the point of 4 corners.

 :Save adjustment result.

 :Reset

-
- 1.To click the “OK” button to choose the image corner to adjust, then to click up down left,right , to stretch or compress the image, to make it a regular rectangle image.
 - 2.To click the “OK” button to choose another image corner, and so on to repeat same operations.



Note: 1. Four points trapezoidal adjustment is an advanced function.

2. If the keystone degree is more than 30 degrees, there may be some image blur. Please be noted, trying to set the projector near the center of the screen, as less degrees helps to project clearer image.

SELECT SOURCE

When the external device is connected to the projector.

1. click the source button of the remote control or projector's top panel to choose corresponding signal source:
HDMI,USB, A/V, VGA.

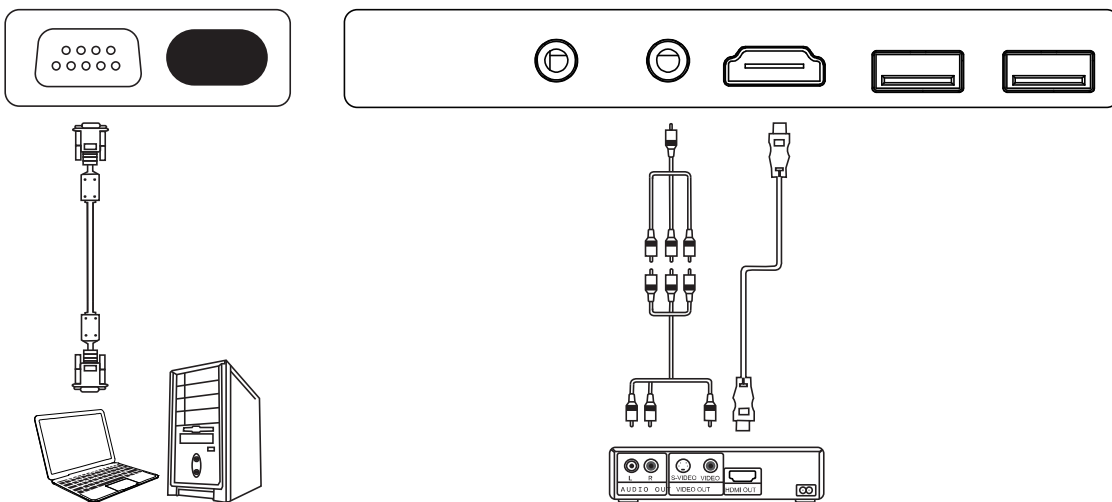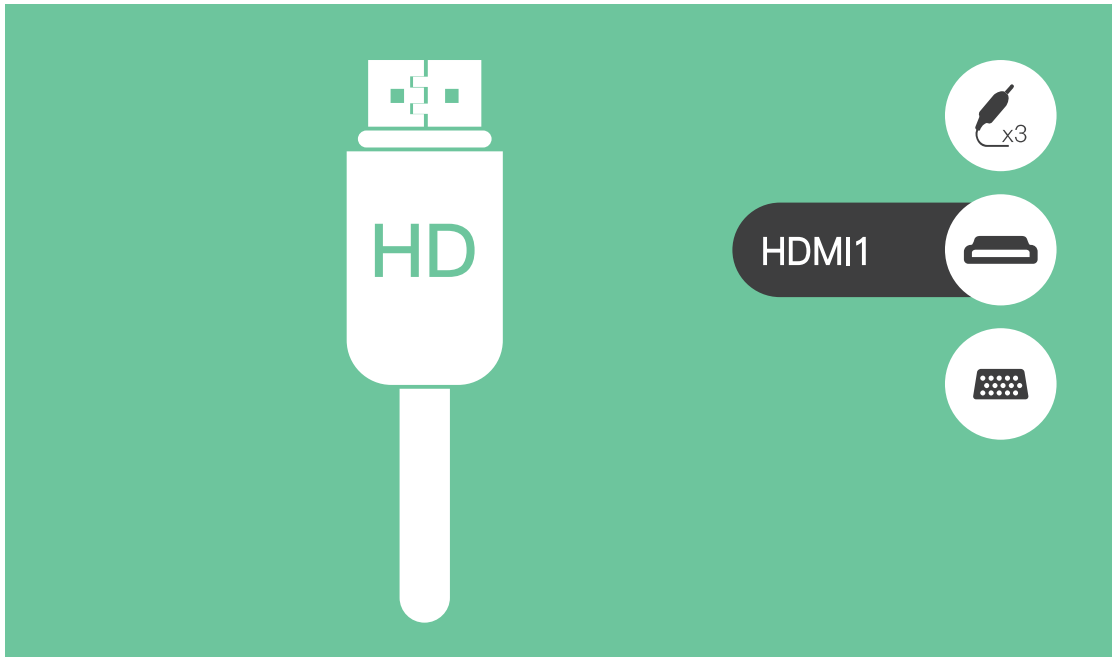

TECHNICAL SPECIFICATION

Projection System		LED+LCD	
Native Resolution		1280*720P Physical	
Android Version		8.0	
Colors	16.77 Million	Throw Ratio	1.44:1
Lifespan	>20,000 Hours	Power	90~240V Ac
Inputs/Outputs	HDMI x 1, USB x 2, Composite Video, WiFi, Bluetooth, Audio Out		

PROJECTION DISTANCE AND SIZE

Refer to the following diagram to decide the projection distance for an appropriate projection screen size.

